

SweetPea3-200 User Guide – Version 1.0

For safety and warranty information, please refer to the Quick Start Guide included in the box with your unit.

Thank you for purchasing a SweetPea3. As this is a new product, we anticipate providing firmware updates to add new features and fix bugs. Please ensure that you register your email address with the SweetPea Toy Company so we may provide you with notices.

Go to www.sweetpeatoyco.com/register

Getting started

Powering Up/Down

Press the power button on the top of the unit for 3 seconds to power up. The music should start playing automatically.

Press the middle button to start and stop the music. You do not need to power down the unit. It will automatically power down after 1 minute when the music is stopped.

Operation

Press the middle button to start and stop the music. Press the right button to skip to the next song. Press the left button to go to the previous song.

Press and hold the right button to fast forward through a song. Press and hold the left button to fast rewind through a song.

When player reaches the end of a song, it will automatically play the next song in the playlist. When it reaches the end of the playlist, it will automatically play the song at the beginning of the playlist.

SweetPea3 Setup

Press and hold the middle button for 6 seconds to get to the settings menu.

General Navigation

Press the middle button to select the highlighted option. Press the left and right buttons to scroll through the options. The screen will prompt the function of the buttons.

Maximum Speaker Volume

Sets the maximum speaker volume the user can access with the volume buttons.

Maximum Headphone Volume

Sets the maximum headphone volume the user can access with the volume buttons when the headphones are plugged in. Please be careful with this setting as the higher volume settings can cause hearing damage. The higher settings are intended for those users with hearing impairment who require a higher volume.

Playlist

Select the playlist. A playlist is created by creating a folder at the root level of the device. See below for more details about playlists.

Auto Off

Sets how long the unit will play before shutting off. The default value is 5 minutes. Please adjust this to --- for unlimited play.

Alarm Settings

You can set the playlist and volume for the alarms.

The **Parental Sleep-in Trainer** is a feature designed to help your child stay in bed in the morning. The screen will wake up and turn red 60 minutes prior to **Visiting time** and it will display a countdown timer. At visiting time, the screen will turn green and the child may come into your room.

Obviously the child will need a bit of training to understand how this works. We recommend you first set the visiting time to around the normal time the child wakes. This will habituate them to seeing green means they can enter your room or if it's red, they only have a short wait. Then move the time forward by 5 minutes every day until you reach your target visiting time. If the child comes into your room early, then simply bring them back to their room and give them a solo activity until the screen turns green.

The **Bedtime Trainer** feature helps regulate the bedtime routine. There are three pre-programmed songs that play at each of the three times you set. **Prep Time** notifies the child to start getting ready for bed. They must be in bed by the time the **Story Time** song finishes playing. If yes, you reward the child with an extra 5 minutes of reading. Then you read until it is **Sleep Time**.

The three songs are called:

- The Cleanup Song
- Read Me A Story
- Sleepy Time

Device Settings

Set the clock.

Set the background color of the screen.

Access the upgrade screen when we make a new load of software available to you.

Loading music

Connect the device to a computer using the USB cable. Select **Charge and Transfer**.

Using Windows Explorer on your PC or Finder on your Mac, find the SweetPea3R in your devices list. The preloaded playlist is called **MyPlaylist1**. To create other playlists, simply create other folders and name them anything you want. You can create as many folders as you like and drag songs into these folders to create a playlist. Songs can be dragged straight from iTunes or from the computer's hard drive.

Song Order

Songs play in a first in first played basis. To create a specific song order, move the songs to a temporary folder and then move them back into your playlist folder one at a time in the order you want them to play.

Charging the device

Simply plug the unit into any USB port. This can be found on your computer, on a USB car adapter, on a USB hub or on a USB wall adapter.

Troubleshooting

Unit is locked up

Press the reset button. The reset button is located in the small hole just above the volume buttons. Use a paper clip or similar device to press the button.

Unit not recognizing songs

Please ensure that the song format is supported. The currently supported formats are MP3, WMA and AAC (.m3a from iTunes).